

MediaCore2 Streamer

Installation Manual

This manual provides the key requirements and setup steps needed to install and start using **MediaCore2 Streamer** on an Axis camera.

1. Requirements

Before installing **MediaCore2 Streamer**, make sure you have:

- 1 Axis camera with ACAP support.
- 2 Admin login to the Axis camera web interface.
- 3 MediaCore2 Streamer .eap file.
- 4 Camera connected to the internet or local network.
- 5 Purchase code for MediaCore2 Streamer.
- 6 MediaCore2 Platform AI Camera Staff account.
- 7 AI Camera Feed created on the MediaCore2 Platform.

Important: The AI Camera Feed must be created inside the MediaCore2 Platform before connecting the camera.

If no AI Camera Feed is available in your account, contact support to add a new AI Camera Feed for your camera.

Final Customer Setup

- 1 Install MediaCore2 Streamer .eap on the Axis camera.
- 2 Start the app from the Axis camera Apps page.

- 3 Open the MediaCore2 Streamer app page.
- 4 Enter the purchase code.
- 5 Click Authenticate.
- 6 Enter the MediaCore2 Platform domain.
- 7 Login using the AI Camera Staff account.
- 8 Select the AI Camera Feed assigned to this camera.
- 9 Enter the camera RTSP username/password if required.
- 10 Click Connect.

Note: If the AI Camera Feed does not appear after login, contact support to add or assign a new AI Camera Feed to your account.

For best results, make sure the camera has a stable network connection and that the assigned AI Camera Feed has already been prepared on the MediaCore2 Platform before installation.